

HaloTherapyPRO

Setup & Operating Instructions

Standard Controller

Rev. October 2026

SYSTEM SETUP

System Setup

Step 1 - Unpack the Box

Carefully remove all items from the packaging.

You should have: • HaloTherapyPRO unit • Salt cover (salt lid) • Fan housing with fan installed • Power cord • 1 lb bag of HaloTherapy Salt

WARNING: If anything is missing or damaged, please contact HaloTherapyPRO customer support before use.

Step 2 - Position the HaloTherapyPRO

Place the unit in its designated location.

- Place the HaloTherapyPRO in its designated location, such as a booth, room, or tent.
- Set it on a stable, flat surface with adequate airflow around the unit.

Step 3 - Install the Fan Housing

Connect and seat the fan housing on top of the unit.

- Plug the fan into its connector on the HaloTherapyPRO, if it is not already connected.
- Insert the fan housing into the slot on top of the HaloTherapyPRO.

TIP: Make sure the fan label is facing forward — this indicates the correct direction of airflow.

Step 4 - Add the HaloTherapy Salt

Load the salt bowl with the included HaloTherapy Salt.

- Ensure the salt bowl is properly seated in the unit.
- Place the salt lid over the salt bowl.
- Add 1 teaspoon of the included HaloTherapy Salt.

Step 5 - Power On

Connect power and switch the unit on.

- Plug the included power cord into the HaloTherapyPRO.
- Plug the other end into a suitable wall outlet.
- Switch the unit on.

TIP: That's it — your HaloTherapyPRO is ready to use.

RUN TIME & PAUSE SETTINGS

Operating Cycle Information

Each device is tested and pre-programmed before shipping.

Your HaloTherapyPRO operates on the following pre-set cycle:

- 10 seconds ON
- 30 seconds OFF

Depending on the size of your booth, room, or tent, runtime may be adjusted at your discretion for the ideal session.

TIP: You can adjust the on/off cycle timing to suit the size of your space.

Recommended Settings

- Grind: 10 seconds
- Pause: 30 seconds

TIP: The Grind setting shown may be too high for smaller setups such as pop-up tents or compact salt spaces. Smaller enclosed areas can reach higher salt concentrations more quickly, so you may need to reduce the Grind time (RED) and/or increase the pause time (BLUE) to decrease salt output and find the setting that works best for your setup. Adjustments may vary depending on room size and preference.

Adjusting Time

Adjusting Grind & Pause Times

Change how long your HaloTherapyPRO Grinds and Pauses.

1. Press SET once. The red display (Grind Time) will flash.
2. Use the ▲ / ▼ buttons to set the desired run (grind) time.
3. Press SET again. The blue display (Pause Time) will flash.
4. Use the ▲ / ▼ buttons to set the desired pause time.
5. Wait 6 seconds. The settings will automatically save.

Video tutorial available at HaloTherapyPRO.com/setup

MODE SETUP

Before You Begin — How the Controls Work

Learn how the controls work before starting Step 1.

Before You Begin

Watch the video above to learn how the settings work. Do not change anything yet. When you are ready to program the control panel, begin with Step 1.

P0 and P1 are setting names and do not change.

Hold SET for 3 seconds to enter the settings.

Press SET to switch between P0 and P1.

Use ▲ / ▼ to change the number shown below P0 or P1.

Ready to program? Start with Step 1 below.

Video tutorial available at HaloTherapyPRO.com/setup

Halogenerator Control Panel Setup Guide

Your HaloTherapyPRO arrives **fully programmed and ready to use.** Only follow these instructions if your control panel settings need to be reset.

Control Panel Overview

- * **P0 / 0** = Timer set to seconds
- * **P1 / 5** = Automatic cycle setting
- * **Red display** = Grinder ON time
- * **Blue display** = Grinder PAUSE time

Important: P0 and P1 are the **setting names**. The number shown below each setting is the value that you change.

Step 1 - Set Timer Mode (P0)

Set the bottom value to 0. The P0 setting name will stay the same.

1. **Press and hold SET for 3 seconds** to enter Mode Setup.
2. The display will show **P0**. **P0** is the setting name and will not change.
3. Use the **▲ / ▼** buttons to change the **bottom value** until it shows **0**.
4. The display should now show:
P0
0
5. Press **SET** to continue.



Step 2 - Set Operating Mode (P1)

Set the bottom value to 5. The P1 setting name will stay the same.

****Set the bottom value to 5. The P1 setting name will stay the same.****

****IMPORTANT:**** Complete this step within ****3 seconds**** of Step 1. If you wait too long, the settings will save automatically and you will need to start again at Step 1.

1. After completing Step 1, ****P1**** will appear on the display.
2. ****P1** is the setting name and will not change.**
3. Use the ****▲ / ▼** buttons** to change the ****bottom value**** until it shows ****5****.
4. The display should now show:
****P1****
****5****
5. Wait a few seconds for the settings to ****save automatically****.



TIP: Wait 6 seconds to save settings.

Support & Warranty

For additional information, customer support, or warranty claims, please visit www.HaloTherapyPRO.com. Thank you for choosing HaloTherapyPRO. Enjoy your halotherapy experience.

HaloTherapyPRO

Setup & Operating Instructions

Alternate Controller

Rev. October 2026

SYSTEM SETUP

System Setup

Step 1 - Unpack the Box

Carefully remove all items from the packaging.

You should have: • HaloTherapyPRO unit • Salt cover (salt lid) • Fan housing with fan installed • Power cord • 1 lb bag of HaloTherapy Salt

WARNING: If anything is missing or damaged, please contact HaloTherapyPRO customer support before use.

Step 2 - Position the HaloTherapyPRO

Place the unit in its designated location.

- Place the HaloTherapyPRO in its designated location, such as a booth, room, or tent.
- Set it on a stable, flat surface with adequate airflow around the unit.

Step 3 - Install the Fan Housing

Connect and seat the fan housing on top of the unit.

- Plug the fan into its connector on the HaloTherapyPRO, if it is not already connected.
- Insert the fan housing into the slot on top of the HaloTherapyPRO.

TIP: Make sure the fan label is facing forward — this indicates the correct direction of airflow.

Step 4 - Add the HaloTherapy Salt

Load the salt bowl with the included HaloTherapy Salt.

- Ensure the salt bowl is properly seated in the unit.
- Place the salt lid over the salt bowl.
- Add 1 teaspoon of the included HaloTherapy Salt.

Step 5 - Power On

Connect power and switch the unit on.

- Plug the included power cord into the HaloTherapyPRO.
- Plug the other end into a suitable wall outlet.
- Switch the unit on.

TIP: That's it — your HaloTherapyPRO is ready to use.

RUN TIME & PAUSE SETTINGS

Operating Cycle Information

Each device is tested and pre-programmed before shipping.

Your HaloTherapyPRO operates on the following pre-set cycle:

- 10 seconds ON
- 30 seconds OFF

Depending on the size of your booth, room, or tent, runtime may be adjusted at your discretion for the ideal session.

TIP: You can adjust the on/off cycle timing to suit the size of your space.

Recommended Settings

- Grind: 10 seconds
- Pause: 30 seconds

TIP: The Grind setting shown may be too high for smaller setups such as pop-up tents or compact salt spaces. Smaller enclosed areas can reach higher salt concentrations more quickly, so you may need to reduce the Grind time (RED) and/or increase the pause time (BLUE) to decrease salt output and find the setting that works best for your setup. Adjustments may vary depending on room size and preference.

Adjusting Time

Adjusting Grind & Pause Times

Change how long your HaloTherapyPRO Grinds and Pauses.

1. Press SET once. The red display (Grind Time) will flash.
2. Use the ▲ / ▼ buttons to set the desired run (grind) time.
3. Press SET again. The blue display (Pause Time) will flash.
4. Use the ▲ / ▼ buttons to set the desired pause time.
5. Wait 6 seconds. The settings will automatically save.

Video tutorial available at HaloTherapyPRO.com/setup

ALTERNATE CONTROLLER MODE SETUP

Settings to Adjust the Mode

These settings ensure the top timer controls the grind time (in seconds) and the bottom timer controls the pause time (in seconds).

These settings make the **top timer control the grind time (in seconds)** and the **bottom timer control the pause time (in seconds)**.

There are **3 settings** that need to be adjusted: **P0, P1, and P2**.

IMPORTANT: **P0, P1, and P2** are the setting names shown on the top display. The top value does not change. Only change the value shown on the bottom display.

Your settings should look like this:

P0 ← Top display — **does not change**

-0- ← Bottom display — set to **-0-**

Sets the **grind time** to seconds.

P1 ← Top display — **does not change**

-0- ← Bottom display — set to **-0-**

Sets the **pause time** to seconds.

P2 ← Top display — **does not change**

P-5 ← Bottom display — set to **P-5**

Sets the **grind time to RED** and the **pause time to BLUE**.

How to Enter Settings Mode

Press and hold SET for 3 seconds to enter the settings.

IMPORTANT: If no button is pressed for **6 seconds**, the controller will automatically save the settings and exit Settings Mode.



Step 1 - Set P0

****Set the bottom value to -0-. The P0 setting name on top will not change.****

1. ****Press and hold SET for 3 seconds**** to enter Settings Mode.
2. ****P0**** will appear on the ****top display****.
3. Use the ****▲ / ▼ buttons**** to change the ****bottom value**** to ****-0-****.
4. Confirm the display shows:

****P0**** ← Top

**** -0- **** ← Bottom

5. Press ****SET**** to continue to ****P1****.



Step 2 - Set P1

****Set the bottom value to -0-. The P1 setting name on top will not change.****

1. While still in ****Settings Mode****, press ****SET**** to move to ****P1****.
2. ****P1**** will appear on the ****top display****.
3. Use the ****▲ / ▼ buttons**** to change the ****bottom value**** to ****-0-****.
4. Confirm the display shows:

****P1**** ← Top

**** -0- **** ← Bottom

5. Press ****SET**** to continue to ****P2****.



Step 3 - Set P2

****Set the bottom value to P-5. The P2 setting name on top will not change.****

1. While still in ****Settings Mode****, press ****SET**** to move to ****P2****.
2. ****P2**** will appear on the ****top display****.
3. Use the ****▲ / ▼ buttons**** to change the ****bottom value**** to ****P-5****.
4. Confirm the display shows:

****P2**** ← Top

****P-5**** ← Bottom

5. ****Do not press anything.**** Wait about ****6 seconds**** for the controller to automatically save the settings and exit Settings Mode.



Support & Warranty

For additional information, customer support, or warranty claims, please visit www.HaloTherapyPRO.com. Thank you for choosing HaloTherapyPRO. Enjoy your halotherapy experience.

HaloTherapyPRO

Setup & Operating Instructions

Sauna PRO / Salt Booth

Rev. October 2026

TOOLS YOU'LL NEED

3-inch (76 mm) Hole Saw and Power Drill

Installation is simple and requires only one tool:

Used to create the opening in the sauna or salt booth wall for the Sauna PRO Salt Pipe.

Don't already have a 3-inch hole saw? Visit the Products tab for a convenient Amazon link to purchase the recommended hole saw for your Sauna PRO installation.



NOTE: No other special tools are required for installation.

SAUNA PRO / SALT BOOTH INSTALLATION

Step 1 - Unbox Your Sauna PRO

Carefully remove the Sauna PRO and all included components from the packaging. Before beginning installation, make sure you have the Sauna PRO, Salt Pipe (Pre Installed), Pipe Cap, Pipe Nut, Salt Bowl Cap, Grinder (Pre Installed), and power adapter.



Step 2 - Choose a Mounting Location

Choose an accessible location on the outside wall of your sauna or salt booth. The Sauna PRO is designed to remain outside the enclosure while the Salt Pipe extends through the wall.

Because salt is loaded through the top of the unit, do not mount the Sauna PRO too high. Leave enough space above the unit so you can easily access the salt loading port and refill the machine.

Also make sure you have convenient access to the grinder and electrical connections for future cleaning or maintenance.

Step 3 - Check the Wall Before Drilling

A 3-inch hole is required for the Sauna PRO Salt Pipe.

Before drilling, check both sides of the wall and make sure the selected area is clear of electrical wiring, heating elements, structural supports, controls, or anything else that could be damaged.

Confirm the position of the Sauna PRO one final time before making the hole.

Step 4 - Drill the 3-Inch Opening

Carefully drill a 3-inch hole through the sauna or salt booth wall at the selected mounting location.

Make sure the opening is clean and that the Salt Pipe can pass through without being forced.



Step 5 - Mount the Sauna PRO

This step is easier with two people.

Have one person hold the Sauna PRO securely against the outside wall while inserting the Salt Pipe through the 3-inch opening.

From inside the sauna or salt booth, the second person should screw the Pipe Nut onto the Salt Pipe.

Tighten the Pipe Nut securely by hand so the Sauna PRO is held firmly against the wall. Do not overtighten.

Step 6 - Install the Salt Bowl Cap


Before operating the Sauna PRO, make sure the Salt Bowl Cap is properly installed.

Unplug the grinder from the unit, then unscrew the grinder by hand by turning it counterclockwise.

Place the Salt Bowl Cap securely into position.


Screw the grinder back onto the unit by hand, then reconnect the grinder to the bottom port.

Make sure the grinder is seated correctly and securely connected before operating the machine.

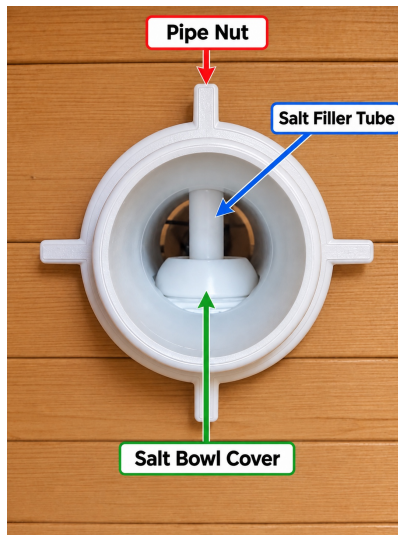

Step 7 - Connect Power

Connect the power adapter to the outlet on the side of the Sauna PRO, then plug the power adapter into the appropriate electrical outlet. Make sure all connections are secure before turning the unit on.

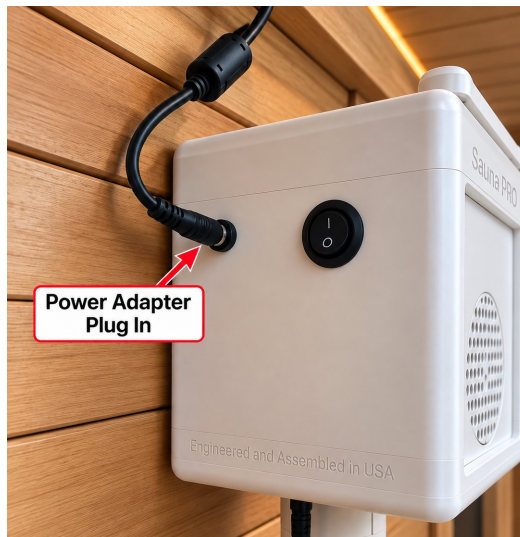

Step 8 - Add HaloTherapy Salt

Add HaloTherapy Salt through the loading port on top of the Sauna PRO.

Start with approximately 1 teaspoon of salt per session. Additional salt can be used depending on the size of the space and personal preference.

Do not overfill the salt bowl.



Step 9 - Power On & Test

Turn the Sauna PRO on and confirm that the grinder and fan are operating normally.

Check inside the sauna or salt booth to make sure salt is being dispersed through the Salt Pipe.

Once normal operation has been confirmed, the Sauna PRO installation is complete.

Step 10 - Controller Setup

The Sauna PRO uses the same controller and controller setup as the ORIGINAL HaloTherapyPRO controller.

Continue to the Original Controller instructions below. Do not use the Alternate Controller instructions.

CLEANING & MAINTENANCE

Maintenance Step 1 - Clear the Salt Pipe

The Sauna PRO was designed for quick and easy cleaning. Routine maintenance takes only a few minutes and helps prevent salt buildup while keeping your Sauna PRO operating smoothly.

Use an electric air blower to blow through the vent on the Sauna PRO rear door panel. This helps clear accumulated salt from the internal Salt Pipe and keeps the airflow path clean.

Maintenance Step 2 - Remove & Clean the Salt Grinder

Unplug the Salt Grinder from the Sauna PRO. Unscrew the grinder by hand and remove it from the unit for cleaning.

Once the grinder is completely clean and dry, reinstall it and plug it back into the Sauna PRO.



IMPORTANT INSTALLATION & USE INFORMATION

Important Installation & Use Information

- The Sauna PRO itself remains OUTSIDE the sauna or salt booth. Only the Salt Pipe extends through the wall into the enclosure.
- Leave enough clearance above the Sauna PRO to easily access the top salt-loading port.
- Keep the Sauna PRO and its electrical components dry and protected from excessive heat and moisture.
- When using the sauna without halotherapy, install the included Salt Pipe Cap on the pipe opening inside the sauna. This helps close the opening and keep the hot air inside the sauna.

RUN TIME & PAUSE SETTINGS

Operating Cycle Information

Each device is tested and pre-programmed before shipping.

Your HaloTherapyPRO operates on the following pre-set cycle:

- 10 seconds ON
- 30 seconds OFF

Depending on the size of your booth, room, or tent, runtime may be adjusted at your discretion for the ideal session.

TIP: You can adjust the on/off cycle timing to suit the size of your space.

Recommended Settings

- Grind: 10 seconds
- Pause: 30 seconds

TIP: The Grind setting shown may be too high for smaller setups such as pop-up tents or compact salt spaces. Smaller enclosed areas can reach higher salt concentrations more quickly, so you may need to reduce the Grind time (RED) and/or increase the pause time (BLUE) to decrease salt output and find the setting that works best for your setup. Adjustments may vary depending on room size and preference.

Adjusting Time

Adjusting Grind & Pause Times

Change how long your HaloTherapyPRO Grinds and Pauses.

1. Press SET once. The red display (Grind Time) will flash.
2. Use the ▲ / ▼ buttons to set the desired run (grind) time.
3. Press SET again. The blue display (Pause Time) will flash.
4. Use the ▲ / ▼ buttons to set the desired pause time.
5. Wait 6 seconds. The settings will automatically save.

Video tutorial available at HaloTherapyPRO.com/setup

MODE SETUP

Before You Begin — How the Controls Work

Learn how the controls work before starting Step 1.

Before You Begin

Watch the video above to learn how the settings work. Do not change anything yet. When you are ready to program the control panel, begin with Step 1.

P0 and P1 are setting names and do not change.

Hold SET for 3 seconds to enter the settings.

Press SET to switch between P0 and P1.

Use ▲ / ▼ to change the number shown below P0 or P1.

Ready to program? Start with Step 1 below.

Video tutorial available at HaloTherapyPRO.com/setup

Halogenerator Control Panel Setup Guide

Your HaloTherapyPRO arrives **fully programmed and ready to use.** Only follow these instructions if your control panel settings need to be reset.

Control Panel Overview

* **P0 / 0** = Timer set to seconds

* **P1 / 5** = Automatic cycle setting

* **Red display** = Grinder ON time

* **Blue display** = Grinder PAUSE time

Important: P0 and P1 are the **setting names**. The number shown below each setting is the value that you change.

Step 1 - Set Timer Mode (P0)

Set the bottom value to 0. The P0 setting name will stay the same.

1. ****Press and hold SET for 3 seconds**** to enter Mode Setup.
2. The display will show ****P0****. ****P0** is the setting name and will not change.
3. Use the ****▲ / ▼ buttons**** to change the ****bottom value**** until it shows ****0****.
4. The display should now show:
****P0****
****0****
5. Press ****SET**** to continue.



Step 2 - Set Operating Mode (P1)

Set the bottom value to 5. The P1 setting name will stay the same.

****Set the bottom value to 5. The P1 setting name will stay the same.****

****IMPORTANT:**** Complete this step within ****3 seconds**** of Step 1. If you wait too long, the settings will save automatically and you will need to start again at Step 1.

1. After completing Step 1, ****P1**** will appear on the display.
2. ****P1** is the setting name and will not change.
3. Use the ****▲ / ▼ buttons**** to change the ****bottom value**** until it shows ****5****.
4. The display should now show:
****P1****
****5****
5. Wait a few seconds for the settings to ****save automatically****.



TIP: Wait 6 seconds to save settings.

Support & Warranty

For additional information, customer support, or warranty claims, please visit www.HaloTherapyPRO.com. Thank you for choosing HaloTherapyPRO. Enjoy your halotherapy experience.