HaloTherapyPRO

User Guide

Sauna PRO / Salt Booth

Rev. November 2026

TOOLS YOU'LL NEED

3-inch (76 mm) Hole Saw and Power Drill

Installation is simple and requires only one tool:

Used to create the opening in the sauna or salt booth wall for the Sauna PRO Salt Pipe.

Don't already have a 3-inch hole saw? Visit the Products tab for a convenient Amazon link to purchase the recommended hole saw for your Sauna PRO installation.



NOTE: No other special tools are required for installation.

Step 1 – Unbox Your Sauna PRO

Carefully remove the Sauna PRO and all included components from the packaging. Before beginning installation, make sure you have the Sauna PRO, Salt Pipe (Pre Installed), Salt Pipe Cover, Pipe Nut, Salt Bowl Cap, Grinder (Pre Installed), and power adapter.



Step 2 – Choose a Mounting Location

Choose an accessible location on the outside wall of your sauna or salt booth. The Sauna PRO is designed to remain outside the enclosure while the Salt Pipe extends through the wall.

Because salt is loaded through the top of the HaloGenerator, do not mount the Sauna PRO too high. Leave enough space above the HaloGenerator so you can easily access the salt loading port and refill the machine.

Also make sure you have convenient access to the grinder and electrical connections for future cleaning or maintenance.

Step 3 – Check the Wall Before Drilling

A 3-inch hole is required for the Sauna PRO Salt Pipe.

Because you are making an opening in your sauna, check your sauna manufacturer's guidance first.

Before drilling, check both sides of the wall and make sure the selected area is clear of electrical wiring, heating elements, structural supports, controls, or anything else that could be damaged.

Confirm the position of the Sauna PRO one final time before making the hole.

Step 4 – Drill the 3-Inch Opening

Carefully drill a 3-inch hole through the sauna or salt booth wall at the selected mounting location.

Make sure the opening is clean and that the Salt Pipe can pass through without being forced.



Step 5 – Mount the Sauna PRO

This step is easier with two people.

Have one person hold the Sauna PRO securely against the outside wall while inserting the Salt Pipe through the 3-inch opening.

From inside the sauna or salt booth, the second person should screw the Pipe Nut onto the Salt Pipe.

Tighten the Pipe Nut securely by hand so the Sauna PRO is held firmly against the wall. Do not overtighten.

Step 6 – Install the Salt Bowl Cap

Before operating the Sauna PRO, make sure the Salt Bowl Cap is properly installed.

Unplug the grinder from the HaloGenerator, then unscrew the grinder by hand by turning it counterclockwise.

Place the Salt Bowl Cap securely into position.

Screw the grinder back onto the HaloGenerator by hand, then reconnect the grinder to the bottom port.

Make sure the grinder is seated correctly and securely connected before operating the machine.

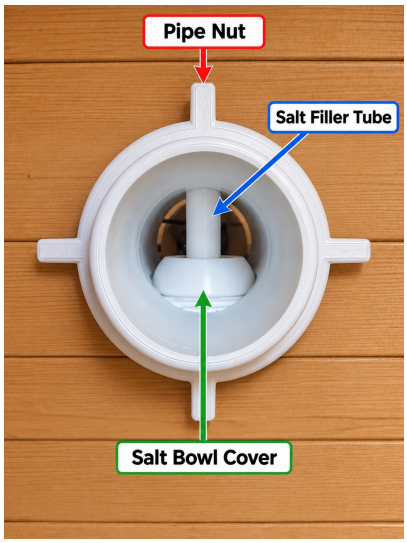

Step 7 – Connect Power

Connect the power adapter to the outlet on the side of the Sauna PRO, then plug the power adapter into the appropriate electrical outlet. Make sure all connections are secure before turning the HaloGenerator on.

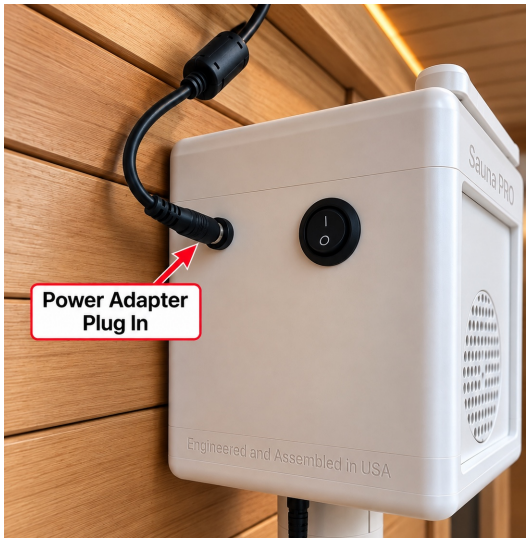

Step 8 – Add HaloTherapy Salt

Add HaloTherapy Salt through the loading port on top of the Sauna PRO.

Start with approximately 1 teaspoon of salt per session. Additional salt can be used depending on the size of the space and personal preference.

Do not overfill the salt bowl.



Step 9 – Power On & Test

Turn the Sauna PRO on and confirm that the grinder and fan are operating normally.

Check inside the sauna or salt booth to make sure salt is being dispersed through the Salt Pipe.

Once normal operation has been confirmed, the Sauna PRO installation is complete.

Step 10 – Controller Setup

The Sauna PRO uses the same controller and controller setup as the ORIGINAL HaloTherapyPRO controller.

Continue to the Original Controller instructions below. Do not use the Alternate Controller instructions.

CLEANING & MAINTENANCE

Maintenance Step 1 – Clear the Salt Pipe

The Sauna PRO was designed for quick and easy cleaning. Routine maintenance takes only a few minutes and helps prevent salt buildup while keeping your Sauna PRO operating smoothly.

Use an electric air blower to blow through the vent on the Sauna PRO rear door panel. This helps clear accumulated salt from the internal Salt Pipe and keeps the airflow path clean.

Maintenance Step 2 – Remove & Clean the Salt Grinder

Unplug the Salt Grinder from the Sauna PRO. Unscrew the grinder by hand and remove it from the HaloGenerator for cleaning.

Once the grinder is completely clean and dry, reinstall it and plug it back into the Sauna PRO.



IMPORTANT INSTALLATION & USE INFORMATION

Important Installation & Use Information

• The Sauna PRO itself remains OUTSIDE the sauna or salt booth. Only the Salt Pipe extends through the wall into the enclosure.

• Leave enough clearance above the Sauna PRO to easily access the top salt-loading port.

• Keep the Sauna PRO and its electrical components dry and protected from excessive heat and moisture.

• When using the sauna without halotherapy, install the included Salt Pipe Cover on the pipe opening inside the sauna. This helps close the opening and keep the hot air inside the sauna.

RUN TIME & PAUSE SETTINGS

Operating Cycle Information

Each device is tested and pre-programmed before shipping.

Your HaloTherapyPRO operates on the following pre-set cycle:

• 10 seconds ON
• 30 seconds OFF

Depending on the size of your booth, room, or tent, runtime may be adjusted at your discretion for the ideal session.

TIP: You can adjust the on/off cycle timing to suit the size of your space.

Recommended Settings

• Grind: 10 seconds
• Pause: 30 seconds

TIP: The Grind setting shown may be too high for smaller setups such as pop-up tents or compact salt spaces. Smaller enclosed areas can reach higher salt concentrations more quickly, so you may need to reduce the Grind time (RED) and/or increase the pause time (BLUE) to decrease salt output and find the setting that works best for your setup. Adjustments may vary depending on room size and preference.

Adjusting Time

Adjusting Grind & Pause Times

Change how long your HaloTherapyPRO Grinds and Pauses.

1. Press SET once. The red display (Grind Time) will flash.
2. Use the ▲ / ▼ buttons to set the desired run (grind) time.
3. Press SET again. The blue display (Pause Time) will flash.
4. Use the ▲ / ▼ buttons to set the desired pause time.
5. Wait 6 seconds. The settings will automatically save.

Video tutorial: https://youtube.com/shorts/9IXG3wq4tg8

MODE SETUP

Before You Begin — How the Controls Work

Learn how the controls work before starting Step 1.

Before You Begin
Watch the video above to learn how the settings work. Do not change anything yet. When you are ready to program the control panel, begin with Step 1.
P0 and P1 are setting names and do not change.
Hold SET for 3 seconds to enter the settings.
Press SET to switch between P0 and P1.
Use ▲ / ▼ to change the number shown below P0 or P1.
Ready to program? Start with Step 1 below.

Video tutorial: https://youtube.com/shorts/7J86UxEQMDk?si=8y7miwLyOfKzGd1z

Halogenerator Control Panel Setup Guide

Your HaloTherapyPRO arrives **fully programmed and ready to use.** Only follow these instructions if your control panel settings need to be reset.

Control Panel Overview

• **P0 / 0** = Timer set to seconds
• **P1 / 5** = Automatic cycle setting
• **Red display** = Grinder ON time
• **Blue display** = Grinder PAUSE time

Important: P0 and P1 are the **setting names**. The number shown below each setting is the value that you change.

Step 1 – Set Timer Mode (P0)

Set the bottom value to 0. The P0 setting name will stay the same.

1. **Press and hold SET for 3 seconds** to enter Mode Setup.
2. The display will show **P0**. **P0 is the setting name and will not change.**
3. Use the **▲ / ▼ buttons** to change the **bottom value** until it shows **0**.
4. The display should now show:
   P0
   0
5. Press **SET** to continue.



Step 2 – Set Operating Mode (P1)

Set the bottom value to 5. The P1 setting name will stay the same.

IMPORTANT: If no button is pressed for **6 seconds**, the controller saves your settings and exits automatically. If that happens before you finish, start again at Step 1.

1. After pressing **SET** in Step 1, **P1** will appear on the display.
2. **P1 is the setting name and will not change.**
3. Use the **▲ / ▼ buttons** to change the **bottom value** until it shows **5**.
4. The display should now show:
   P1
   5
5. **Do not press anything.** Wait about **6 seconds** for the controller to save the settings and exit automatically.



TIP: Wait 6 seconds to save settings.

Support & Warranty

For questions, customer support, or warranty claims, email support@halotherapypro.com or use the contact form on our website. Thank you for choosing HaloTherapyPRO. Enjoy your halotherapy experience.